



# NETWORKING AND SYSTEM MAINTENANCE


FOR THE SIA-3000

## Topics of this paper:

- Networking the SIA-3000
- Running Scandisk & defragmenting the drive
- Hooking up an external monitor


## Connecting to the Network Interface Card (NIC)

A 10/100BaseT NIC card is included with every SIA-3000. Consult with your company's information systems personnel to ensure your LAN system is compatible with the SIA-3000 network card and to establish a local network connection. Plug the RJ45 cable connector into the RJ45 connection on the back panel.

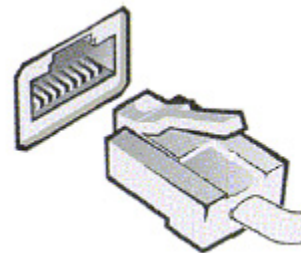


## Connecting to a Microsoft Network

- Connect the network cable to the RJ45 connector of the SIA 3000.
- Power up the SIA 3000 (this will take a few minutes)
- Click Tool on the VISI menu bar.
- Point to Network and then select Properties.
- Click Yes to continue.
- Click Add in the Network Properties dialog box.

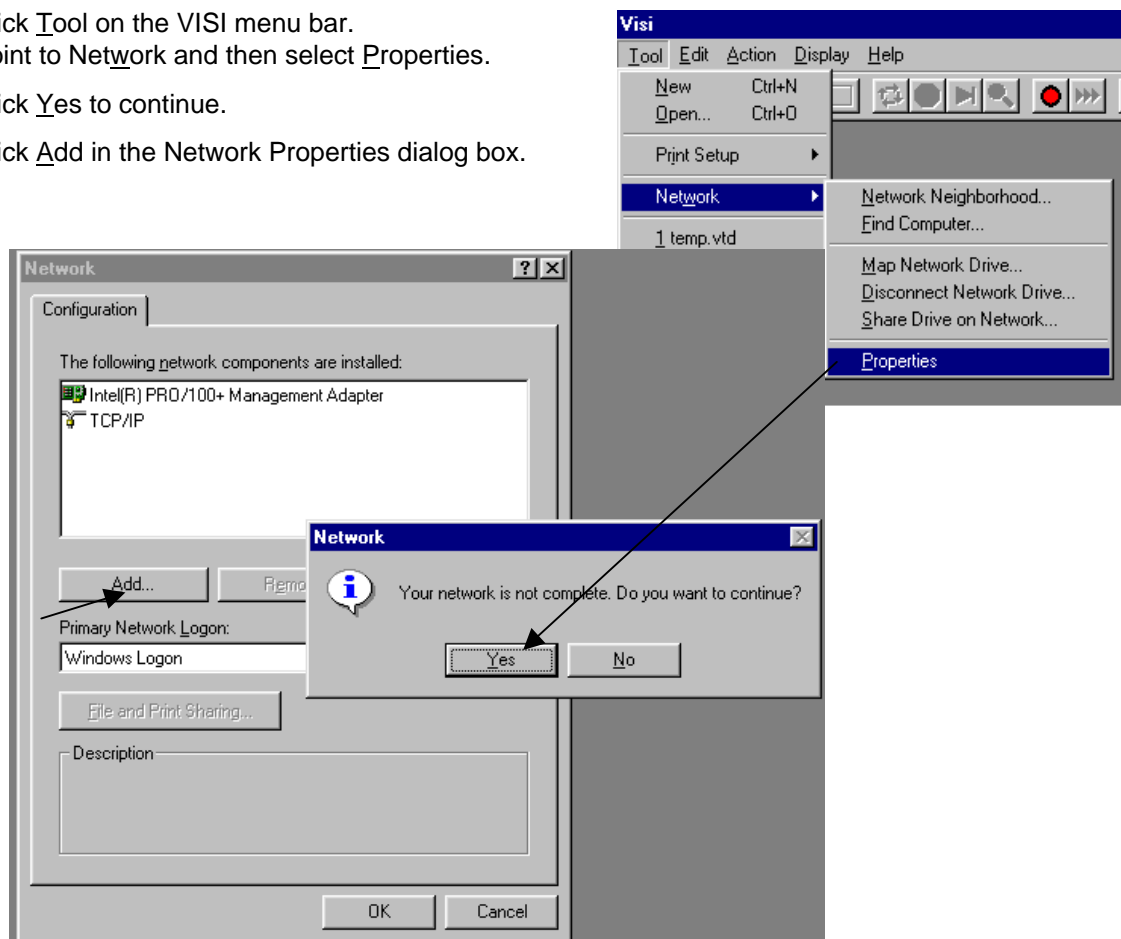


- Select Client and click Add

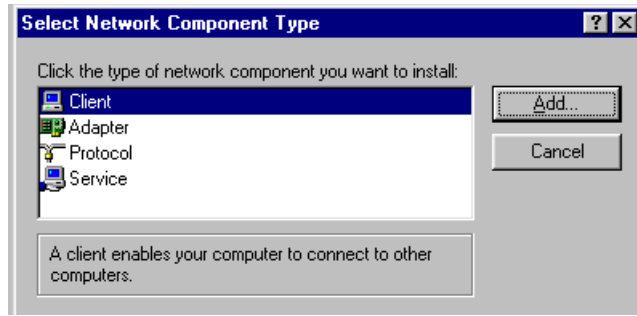


**Add Network Component Dialog Box**

- Select 'Microsoft' for Manufacturers.
- Select 'Client for Microsoft Networks' for the Network Clients.
- Click OK

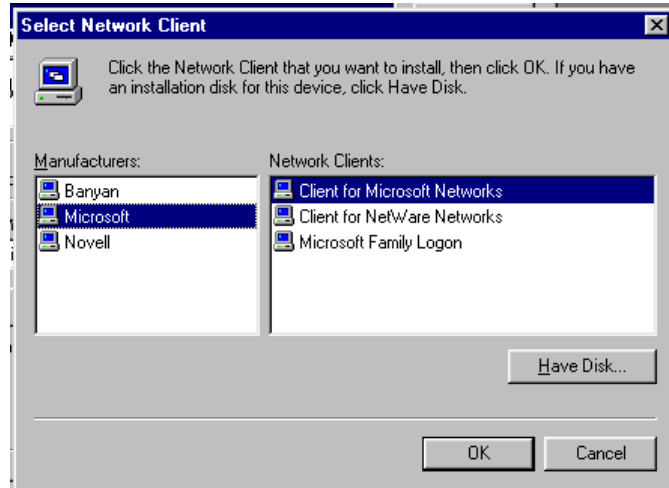


**Add Client Dialog box**

- Click OK on the Network dialog window
- Click OK if prompted for the Windows 98 CD

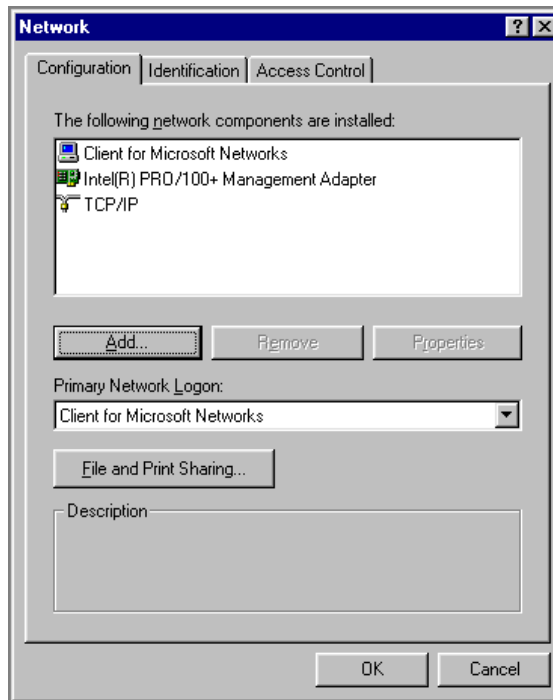


**Complete Network Dialog box**

- Select C:\Win98 from the Copy files from drop down box.
- Click OK
- Click Yes to restart the system.

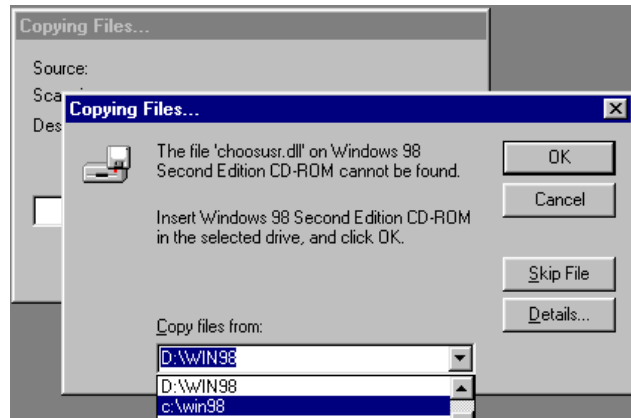

- Once the system is running enter:
  - Username
  - Password
  - Domain (once you enter this value it will be stored automatically)
  - Obtain these from your Network Administrator)
- Click OK

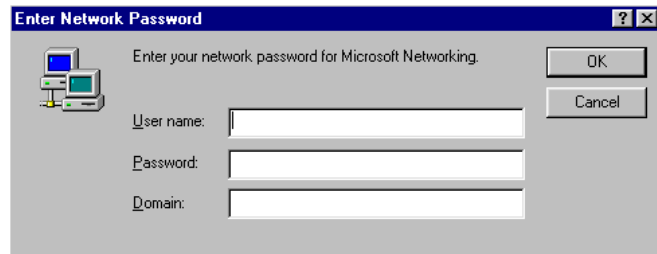


**Important:**


**Consult your Network Administrator before connecting to the network regarding virus protection software and security issues. Virus software will need to be “Pushed” onto the SIA-3000. Also find out if the network is using static or dynamic IP addresses.**

## Changing the Network Domain Name

- Click Tool on the VISI menu bar.
- Point to Network and then select Properties.

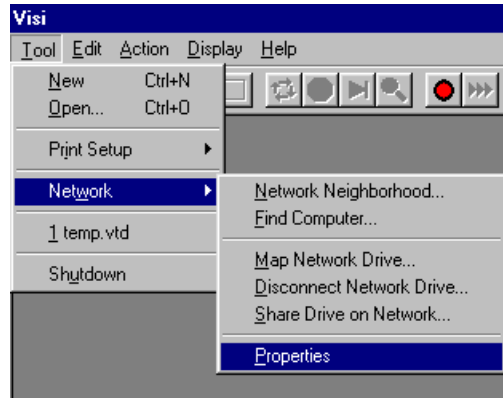


- Select Client for Microsoft Networks
- Select Properties

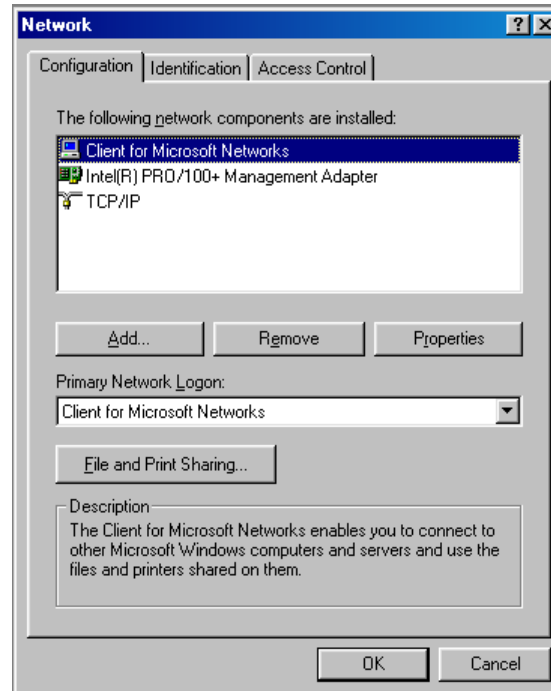

**Network Properties Dialog Window**


- Check “Log on to Windows NT domain”
- Enter the network domain name in the Windows NT domain text box.
- Either option for the Network logon options will work
- Select OK when finished
- Select OK on the Network Properties Dialog Window
- Click OK if prompted for the Windows 98 CD

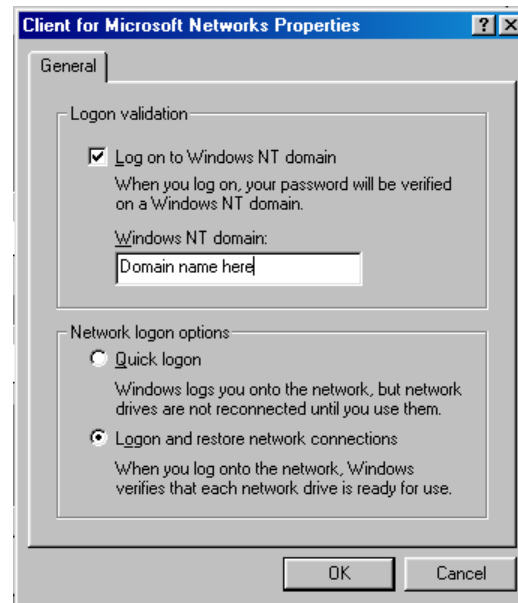

**Client for Microsoft Networks Properties Dialog Window**

- Select C:\Win98 from the Copy files from drop down box.
- Click OK
- Click Yes to restart the system.

The SIA-3000 will restart and the domain will be as selected.

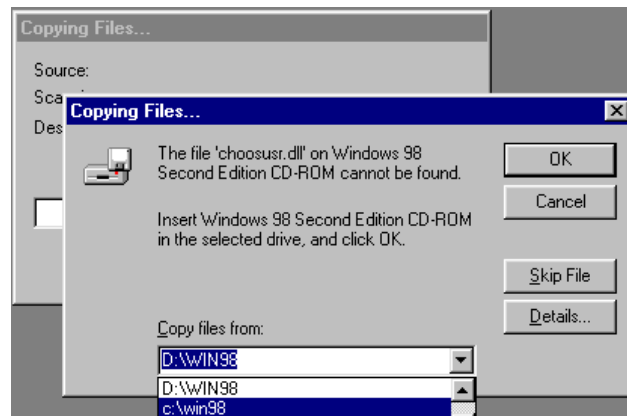


## Changing the SIA-3000 IP Address

- Click Tool on the VISI menu bar.
- Point to Network and then select Properties.




- Select TCP/IP and select Properties

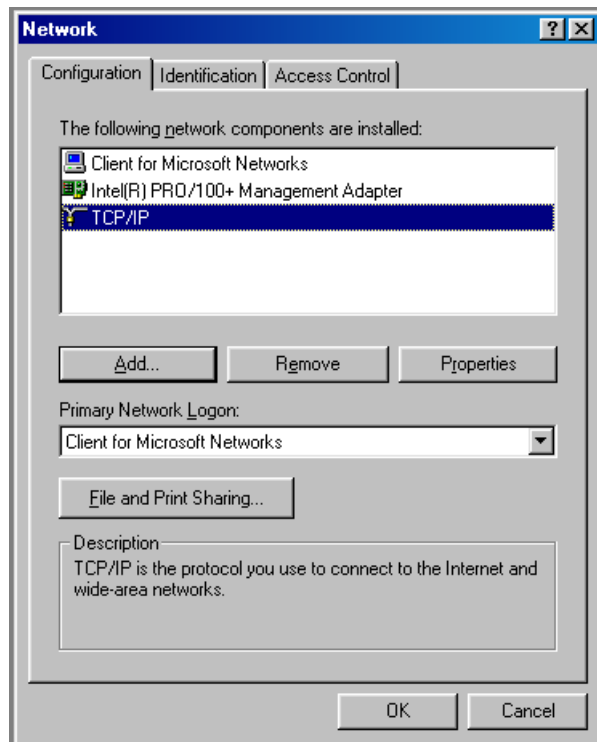


**Network Properties Dialog Window**

- Select Specify an IP address
- Enter the IP Address and Subnet Mask
- Modify any other network settings by selecting the appropriate tab.
- Select OK when finished to close the TCP/IP Properties Window.

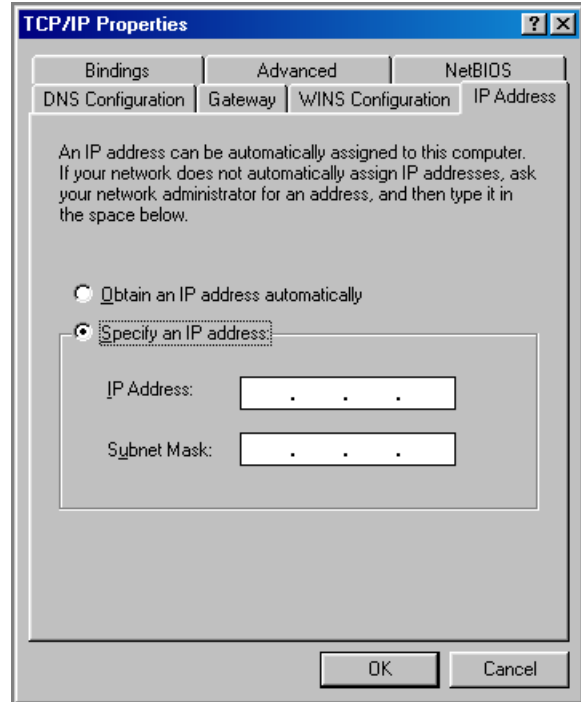

**TCP/IP Properties Dialog Window**

- Click OK if prompted for the Windows 98 CD
- Select C:\Win98 from the Copy files from drop down box.
- Click OK
- Click Yes to restart the system.

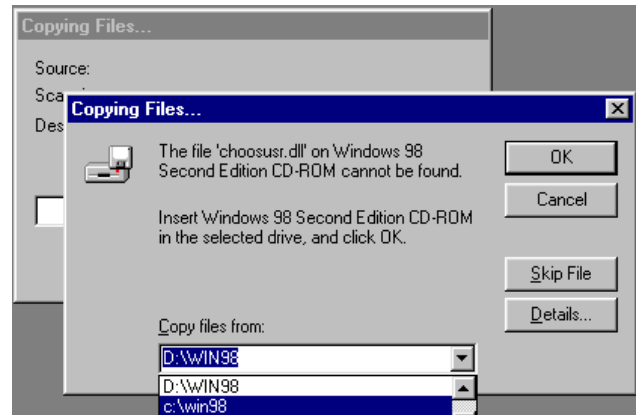


## Performing Scandisk and Defragmentation of SIA-3000 local disk

- Select the Explorer tool on the VISI menu bar




- Right click on the Sia3000 drive and select properties

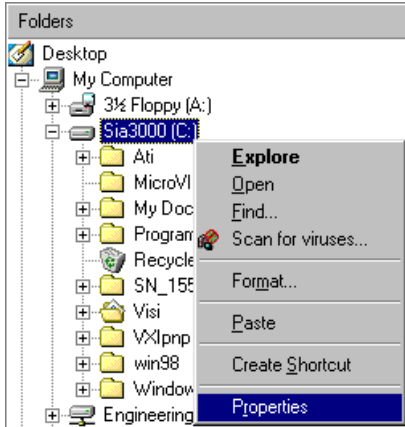

- Select the Tools tab


Error-Checking status will be performed first. Defragmentation will be then be performed. Follow directions on the following page.

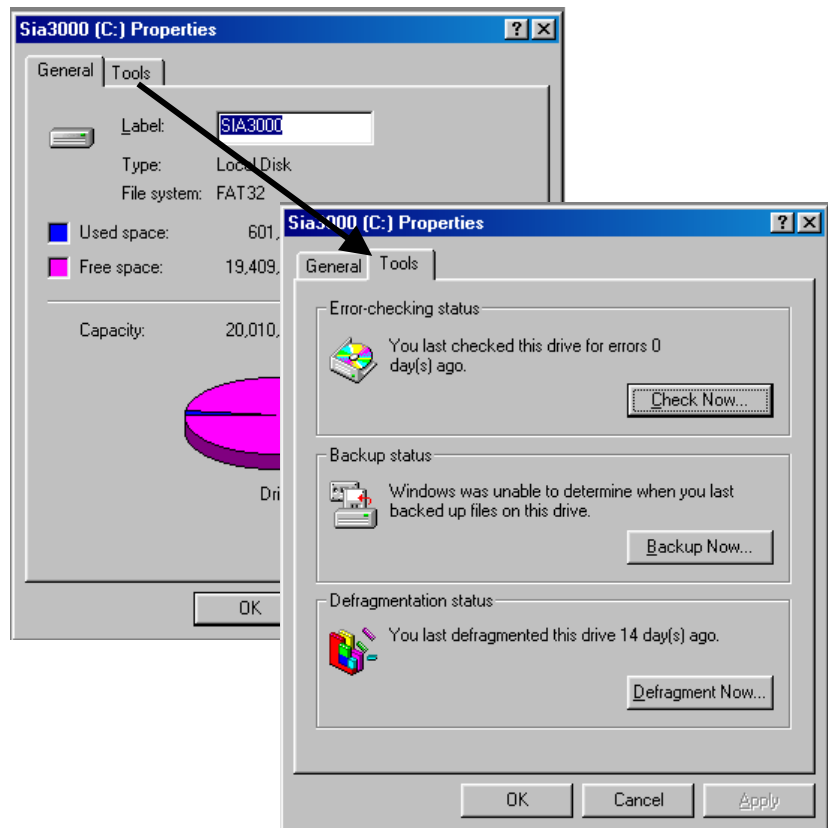



Local Drive Properties Dialog Window




- Use the Error-checking status tool first
- Select “Check Now...”
- For Type of test select Standard
- Also check the “Automatically fix errors” check box
- Select Start to perform the Scandisk
- Close the Scandisk Results window when complete
- Close the Scandisk tool when complete to return to the Tools window

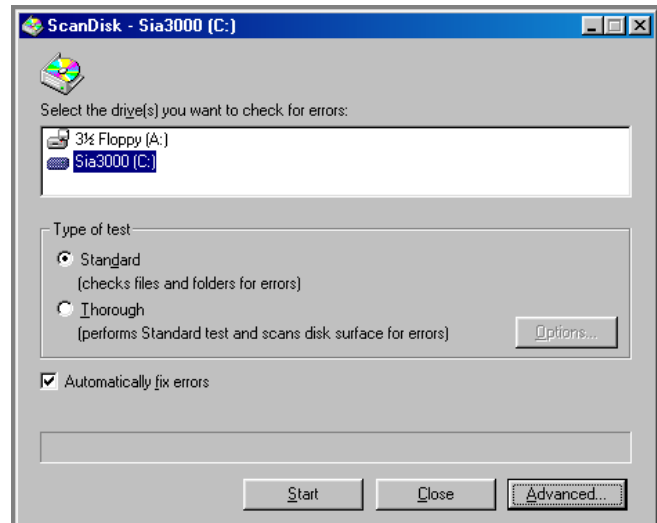

- Next use the Defragmentation status tool
- Select “Defragment Now...”
- The Defrag Dialog Window will appear and show status of the defragmentation.

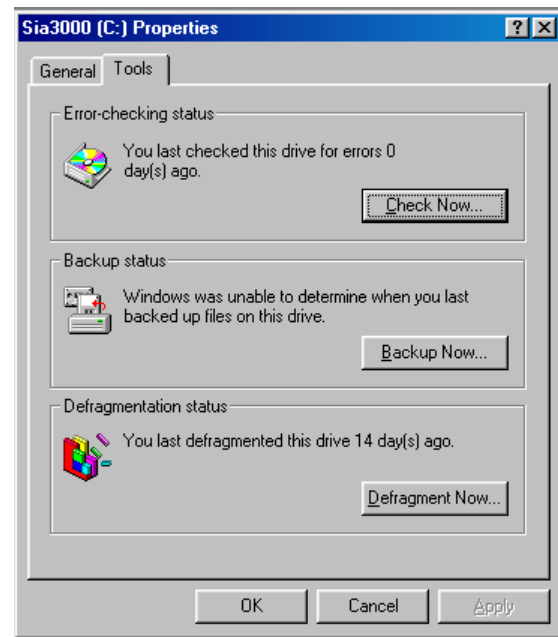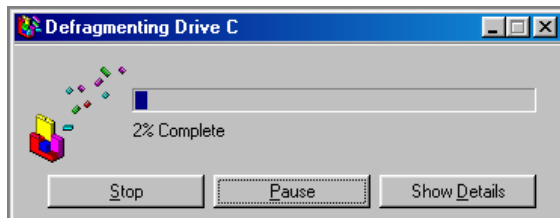

- When the process is complete, select Yes to exit Disk Defragmenter

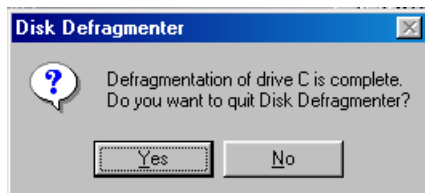


- Select OK to exit the Tools window

The local disk has now been defragmented and scanned for errors.

## Connecting an External Monitor to the SIA-3000

- Power down the SIA-3000
- Connect the external VGA monitor to the VGA port on the back of the SIA-3000
- Power up the monitor before power up of the SIA-3000
- Power up the SIA-3000 after power up of the monitor
- The monitor will now operate
- \*If the system requires a new monitor driver, select the files from the c:\win98 directory (see procedure below)

- Select 'Next' to verify the installation procedure.
- Select 'Search for the best driver for your device.'
- Specify a location: c:\win98
- Windows will detect the driver
- Select 'Next' to install the driver
- Select 'Finish'

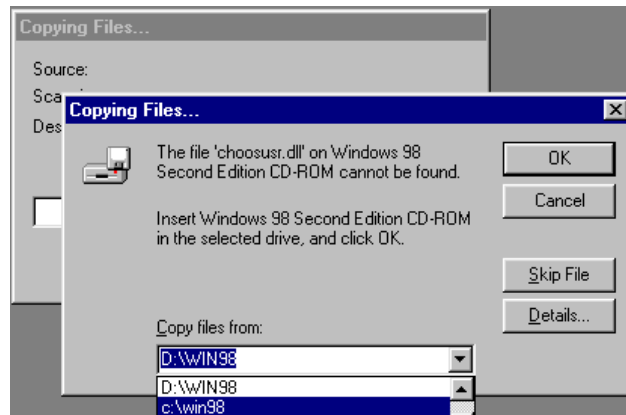

FOR MORE INFORMATION CONTACT:

**WAVECREST** CORPORATION  
7626 GOLDEN TRIANGLE DRIVE  
EDEN PRAIRIE, MN 55344  
[WWW.WAVECREST.COM](http://WWW.WAVECREST.COM)

1(952)-646-0111

Rev09.11.02 tag